T02-00034-ABAA Telemetry Cable/Horn Relay Installation Instructions



Introduction

The T02-00034-ABAA cable can be used to connect to the input and output lines of the auxiliary connector of TM8000 and TM9000 mobile radios.

The cable also provides a line for ignition sense and a relay driver for switching a 12V relay.

Notice The radio does not meet the IP54 protection standard once the bung covering the radio's auxiliary connector has been removed.



Notice The cable may not be suitable for use in high-temperature environments such as the engine compartment.

Hardware Configuration for Ignition Sense

The radio hardware link LK2 (on the top-side of the radio's main board) must be fitted for ignition sense operation. The following table describes the configuration options.

(i)

LK2 is fitted by default.

Configuration of hardware links for ignition sense


Link required	Voltages required for T02-00034-ABAA
LK2 in (factory default)	Ignition signal \leq 0.9V (or floating) = off Ignition signal \geq 5V = on Ignition-sense compatible with 24V vehicular systems (34V max.)

Relay and Relay Driver

The cable is supplied with a relay (rated 12 V/30 A, with built-in suppression diode) and a relay socket (including crimp terminals).

(i)

Although the product can drive any similar automotive relay with a 12 V coil that draws no more the 500 mA in operation, Tait recommends a type with a built-in suppression diode for EMC purposes but this is not required for correct operation of the product.

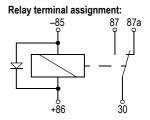

The relay driver of the T02-00034-ABAA is controlled by AUX_GPIO4 which must be programmed as an Active Low output. Refer to the Help of the radio programming application for more information.

Interface Information

T02-00034-ABAA interface information

Pin	Signal	Cable	Color
8	+13V_SW (positive relay terminal) 3.3ft (1m) of red/black		red
10	AUX_GPIO4 (via FET to negative relay terminal)	twin pair cable	black
4	AUX_GPI3 (ignition sense)	3.3ft (1m) single yellow cable	yellow
12	AUX_GPI1 3.3ft (1m) of 6-core cable,		yellow
5	AUX_GPI2 (emergency)	green cable not connected.	white
9	AUX_GPIO6		red
1	AUX_GPIO7		
15	Ground		black

The relay outputs of the T02-00034-ABAA cable are protected by two SMD fuses located on the circuit board inside the connector housing. For servicing information refer to the radio's service manual.

More Information

For more information on this product contact your radio provider.